



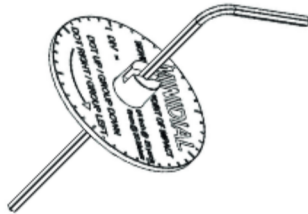


SMS2 INSTRUCTIONS Quick Guide

IMPORTANT!!
PLEASE ENSURE ALL FIREARMS ARE CLEAR AND
SAFE BEFORE CONTINUING

Tilt battery in as shown against contact first.

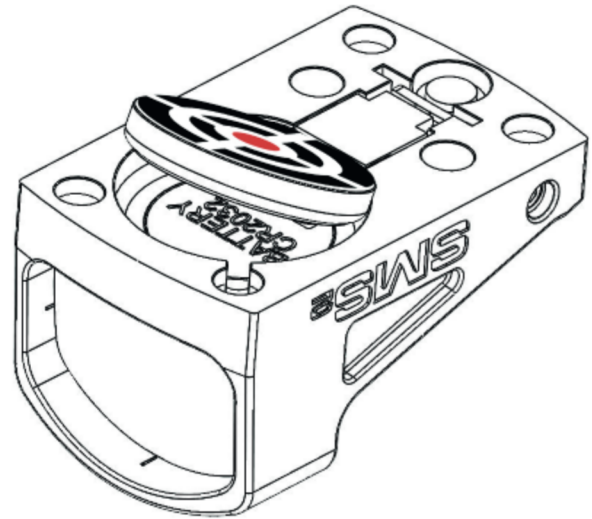

Thread hex wrench into minidial to gage adjustment as you turn.

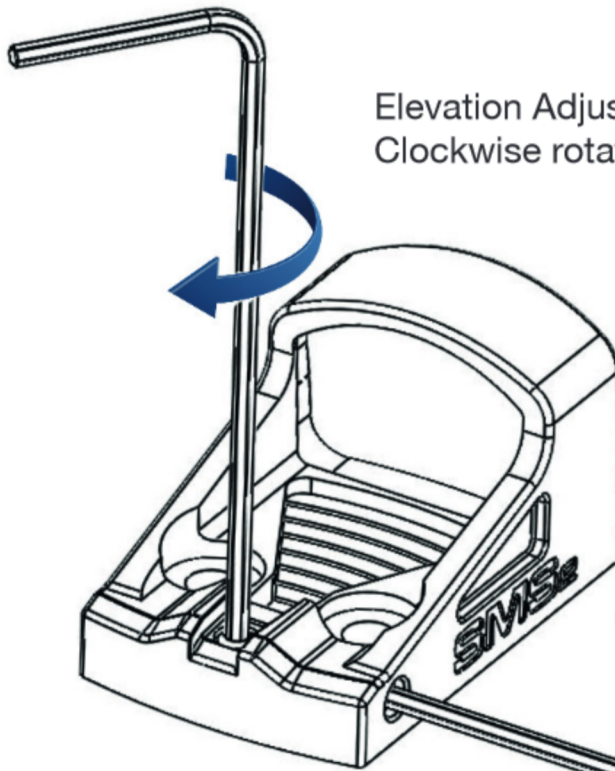

Elevation Adjustment:
Clockwise rotation = Group Up/Dot Down

Windage Adjustment:
Clockwise rotation = Group Right
/ Dot Left



ENSURE THAT YOU KEEP TOOLS SAFE FOR FUTURE USE